LINKSYS® by Cisco

Quick Installation Guide

Wireless Home Audio Controller

Wireless-N Touchscreen Remote

DMRW1000

Introduction

Thank you for making a great decision and choosing to purchase the Linksys by Cisco Controller – Wireless-N Touchscreen Remote. The Controller is designed to be used with the Linksys by Cisco Director (DMC250), Player (DMP100), or Conductor (DMC350).

With the Controller you can control your Wireless Home Audio system from any room in your house. Select your music source, stream different music to individual rooms, or the same playlist throughout your entire home when you're in Party Mode—all at the touch of your finger. And with the Docking Station accessory, stream songs from your Apple iPod® playlists. Browse, discover and play millions of songs online through Rhapsody® and RadioTime® anywhere in your home.

Wireless Home Audio Product Family†

Package Contents

Controller

Power Adapter

USB Cable

Battery

Quick Installation Guide

Controller Overview

Top

Side

Controlling Multiple Rooms or Zones?

Play To

Allows you to change how many devices you are currently "playing to". Devices you check will all play the same music, synchronized.

NOTE: The collection of devices you are "playing to" is called a zone. These devices remain linked until you uncheck them in the Play To menu.

Selected Device

Touch here to choose the device or zone you want to control. All actions (Play, Stop) will be directed to the currently selected device or zone.

NOTE: You can change the device or zone you are controlling at any time. Simply press the selected device name and choose another device or zone you wish to control.

Wireless Home Audio Installer

The Wireless Home Audio Installer will guide you through the setup of your Linksys by Cisco Wireless Home Audio devices. Below is an overview of the steps required to get up and running.

- Install EasyLink Advisor
- Install Cisco Media Center software for your computer
- Configure your Wireless Home Audio Devices
- Create your Cisco account and register for music services

A To begin, insert the CD into your CD-ROM drive.

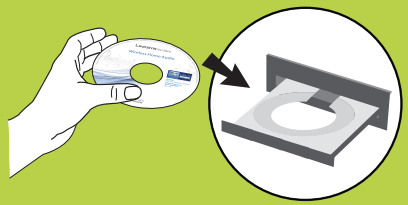

NOTE: The Controller package does not include a CD. Use the CD that came with your Director, Player, or Conductor.

B Click the **Start Setup** button and follow the on-screen prompts to configure your Wireless Home Audio devices.

Touchscreen Icons

Navigation Arrows Scrolls through the icons in the direction selected.

Back Returns to the previous screen.

Play/Pause This button toggles between playback and a paused state. If nothing is playing, pressing this button when music is selected starts playback of the selected music.

NOTE: You cannot pause streaming Internet music.

Stop Stops the current music selection (playing or paused music) and moves the first item played to the top of the queue which is then highlighted. The user is then brought to the Now Playing screen. The Stop button does not clear the queue.

Play To Use this button to select the zones to play the music to.

Add to Now Playing Queue When music is highlighted (Genre, Playlists, Artist, Album, or Song), the selected item will be added to the queue on the *Now Playing* screen. The queued item will be added to the bottom of the queue and will not begin playing even if it is the only item in the queue.

Now Playing Queue Press this button for a shortcut to the Now Playing screen. The Now Playing screen shows the currently playing song and a list of your music in your queue.

Selected Device Touch to choose the device or zone that you want to control. All actions (Play, Stop) will be directed to that device/zone.

Charging the Battery

The Controller includes two charging options. One connects the Controller to the computer to charge and the other connects to a standard power outlet.

Battery Status The battery status icon will indicate the power remaining on the battery. A message will appear when the battery power is low.

Battery Charging When the battery is plugged into a power source and charging, this icon will be displayed in the upper left corner of the LCD touchscreen.

NOTE: There is no power off button on the Controller. The Controller has sleep mode and hibernate mode to reduce battery consumption.

Online Services

Rhapsody is the critically-acclaimed digital music service that provides its members unlimited access to millions of full-length, CD-quality tracks. With Rhapsody and your new Linksys by Cisco Wireless Home Audio product you will have instant access to all of your favorite music. Listen whenever you want, play continuous music with Rhapsody Channels and discover new music and old favorites.

Radiotime provides streaming access to over 100,000 radio stations and shows. You can locate shows based on location, topic, or music genre.

Troubleshooting

Do I need to run the CD to configure my Wireless Home Audio devices?

- Yes. Basic settings can be applied on some devices via their screens, but in order to fully configure your Wireless Home Audio devices you must use the CD.

How do I configure my firewall to work with my Wireless Home Audio devices?

- It is possible that firewalls can prevent your devices from being found and configured. Please visit **www.linksysbycisco.com/homeaudio/ug** for details on how to fix your firewall settings.

How do I share my music from additional computers and allow them to control my Wireless Home Audio devices?

- Run the CD on your additional computers and select the **Connect Computers** option on the first screen.

Where do I find the Cisco Media Center software after installation is complete?

- Go to **Start** > **Programs** and select **Cisco Media Center**. You can start the Cisco Media Player from here.

What do I do if my iTunes library or other audio files are not found by Cisco Media Center?

- Some iTunes files may not be available. Songs purchased from iTunes* may be protected with Digital Rights Management (DRM); DRM files cannot be played to your Wireless Home Audio devices directly from your PC. The optional Linksys by Cisco Docking Station for iPod (MCCI40) will allow you to connect your iPod to your Director or Conductor and play back all of the songs from your iPod.

  *iTunes Plus files are not protected

- During the initial configuration, you are asked to select directories where your music is stored. To change or add additional directories, right-click on the icon on the taskbar and select **Properties**. Modify or type in a new directory by typing in the entire path such as **C:\Documents and Settings\username\My Documents\My Music;** in the *Local Media Directory* field. Additional directories are separated by a semicolon. Click **OK** after all updates are complete.

WEB: If you need additional support, contact us on the web at **www.linksysbycisco.com/support**

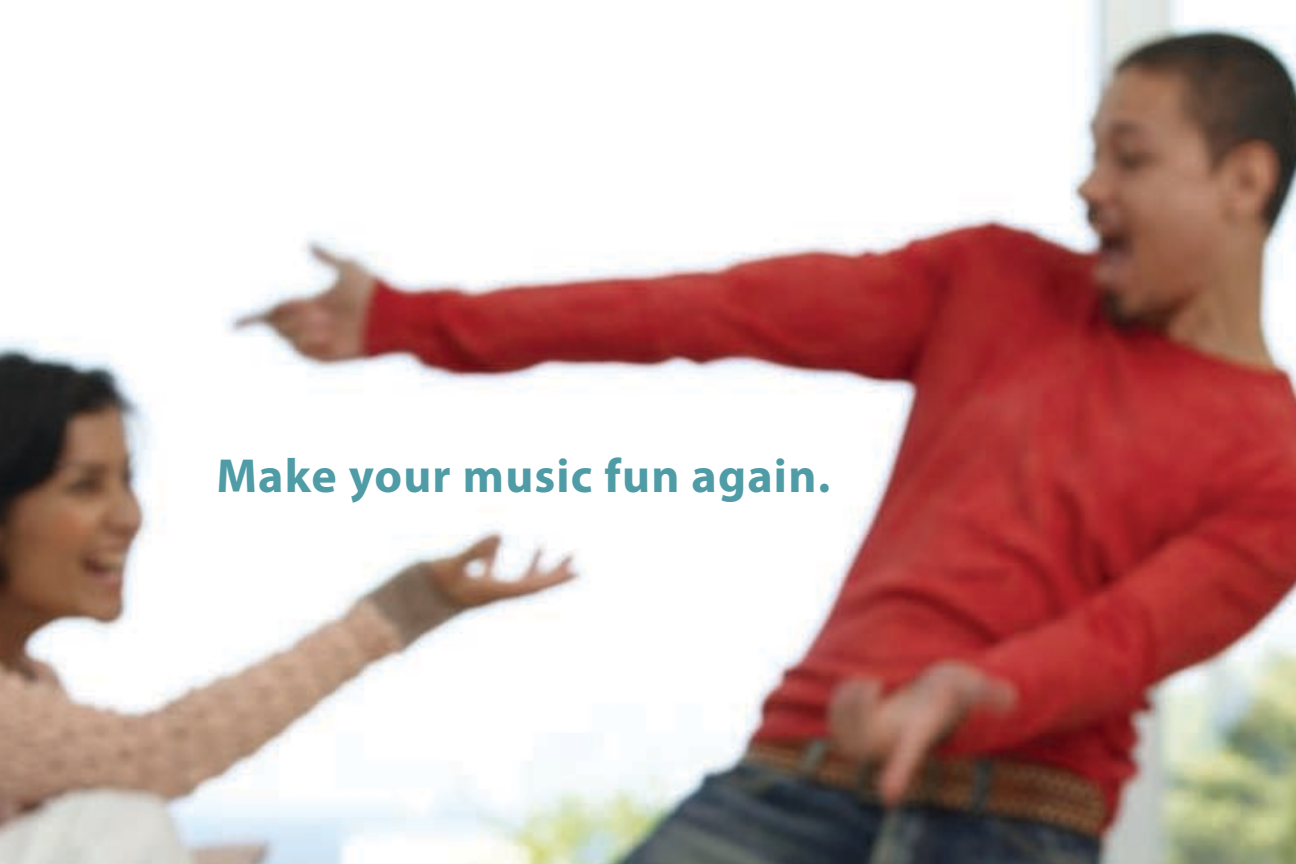
Make your music fun again.

Thank you for purchasing the Linksys by Cisco Controller.
We hope you enjoy hours of rich, quality sound.

Phone Support (North America)
866-509-7452

Website
www.linksysbycisco.com

Support Site
www.linksysbycisco.com/support

RMA (Return Merchandise Authorization)
www.linksysbycisco.com/warranty

Sales Information
800-546-5797 (800-LINKSYS)

In an effort to save printed paper, User Guides are available as a download at the following web address:

www.linksysbycisco.com/wirelesshomeaudio/ug

Refer to the User Guide for the Director or Conductor for additional information and troubleshooting.

For additional information on the Linksys by Cisco Wireless Home Audio products, visit the following web address:

www.linksysbycisco.com/wirelesshomeaudio

† The maximum performance for wireless is derived from IEEE Standard 802.11 specifications. Actual performance can vary, including lower wireless network capacity, data throughput rate, range and coverage. Performance depends on many factors, conditions and variables, including distance from the access point, volume of network traffic, building materials and construction, operating system used, mix of wireless products used, interference and other adverse conditions.

Linksys, Cisco and the Cisco Logo are registered trademarks or trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries.

iPod is a trademark of Apple, Inc., registered in the U.S. and other countries. Rhapsody is a trademark or a registered trademark of RealNetworks, Inc.

Other brands and product names are trademarks or registered trademarks of their respective holders.

Copyright © 2009 Cisco Systems, Inc. All rights reserved.

LINKSYS® by Cisco

cisco

09021910NC-RR

3240-00542